



Kodak EasyShare M532 Screen Replacement

Replace the screen of your Kodak EasyShare M532 camera.

Written By: Samantha Vasquez



INTRODUCTION

This guide is a quick and easy way to replace your Kodak M532 screen.

Step 1 — Screen



- Remove the battery located at the bottom of the camera.

Step 2



- Using the correct screw bit, remove the two Phillip Screws from each side of the camera. Including the screw on the bottom of the camera .

Step 3




- Starting at the top of the camera, remove the front and back of the camera with the prying tool

Step 4




- Carefully remove the front and back of camera

Step 5

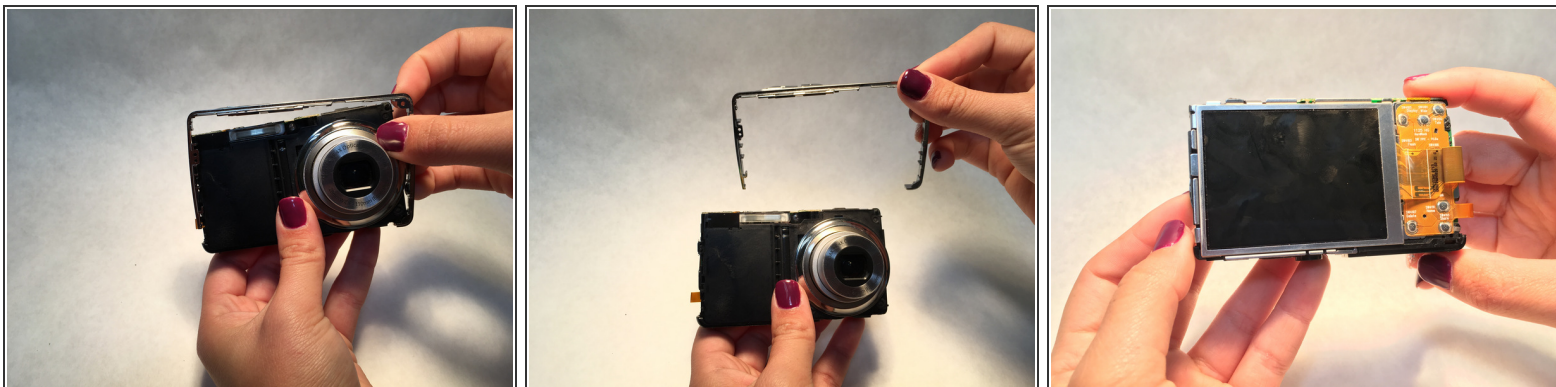


- After you remove the front and back case, carefully remove the top buttons
- When it is completely off you should be left with the screen and inside parts



Step 6

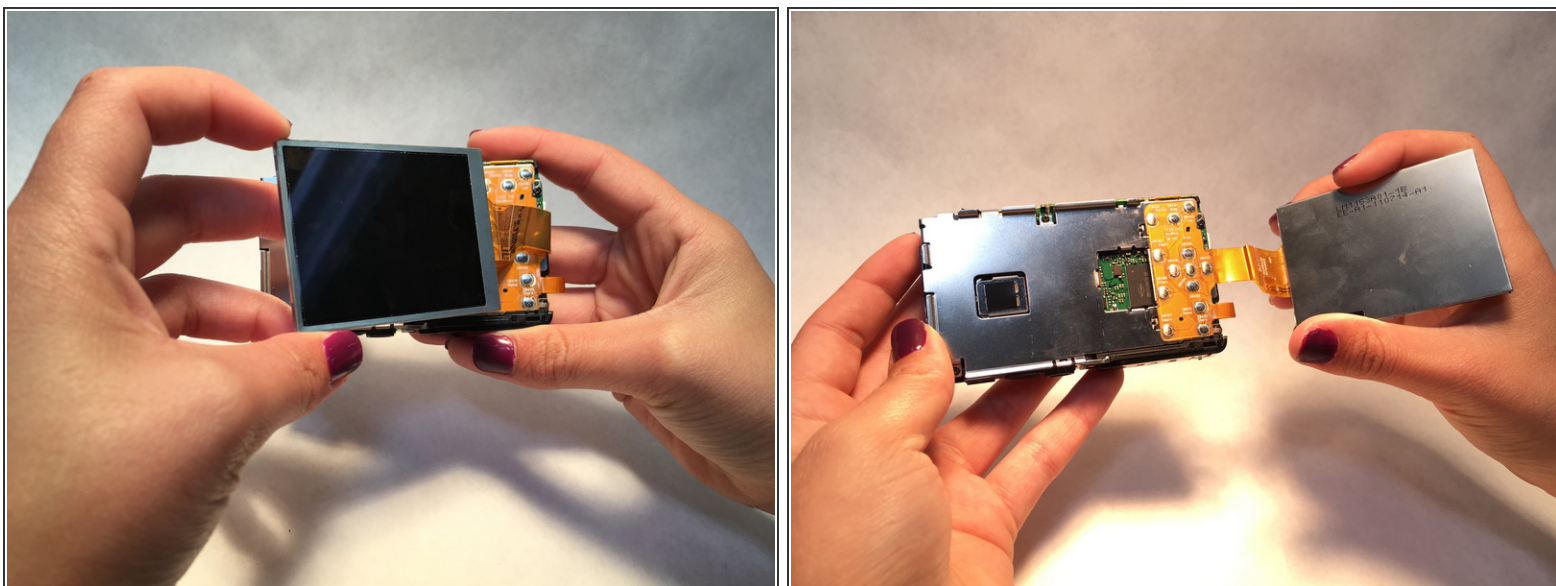

- Take off screen, being cautious not to remove the orange tape.




 It is okay if the orange tape clips out of its spot

Step 7

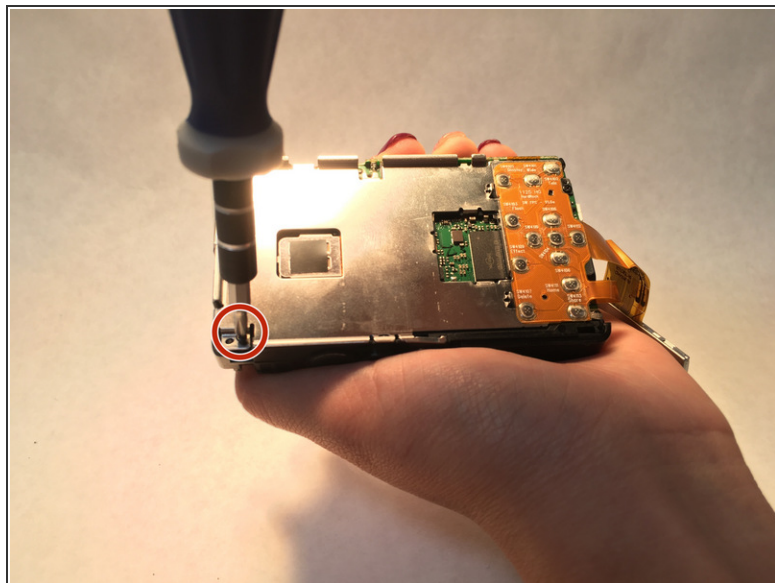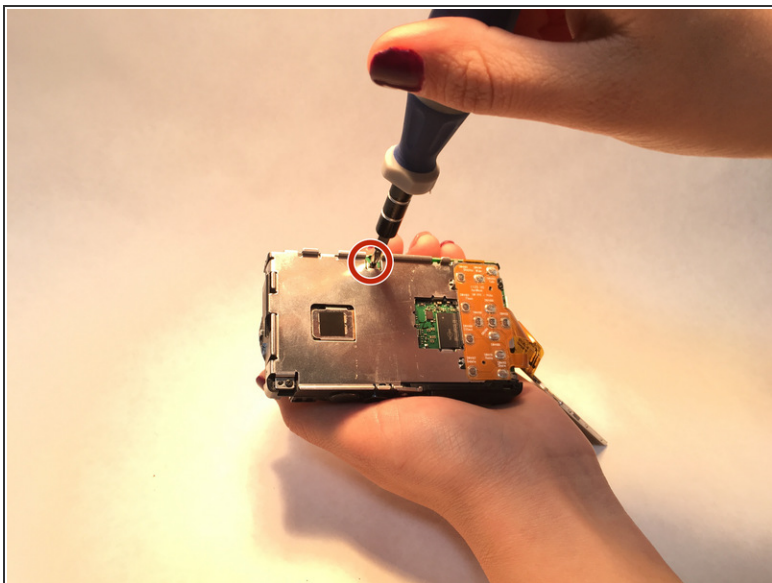




- Remove the inside screws. There is one at the top in the center and one in the bottom left corner

   Step 8

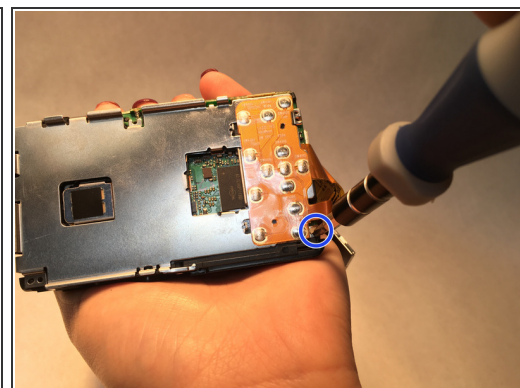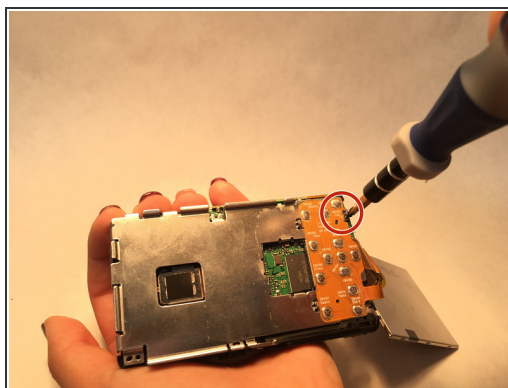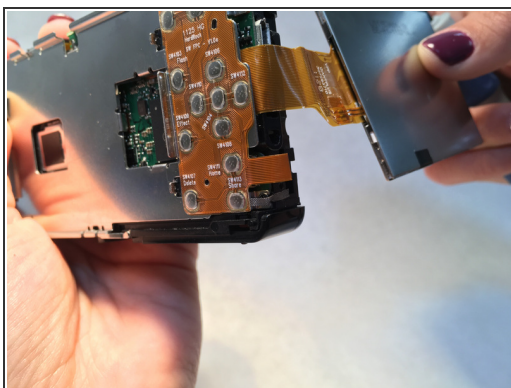

- Remove top screw from the right side
- Move the silver tape to the right side to remove the screw in the bottom corner




Step 9

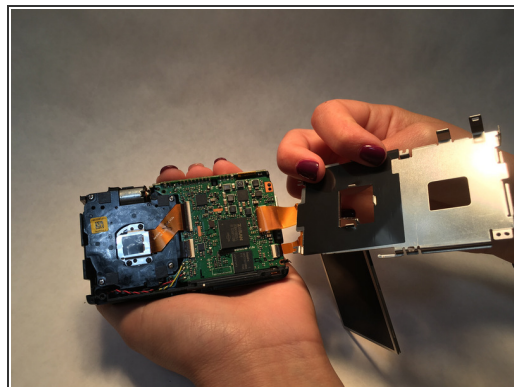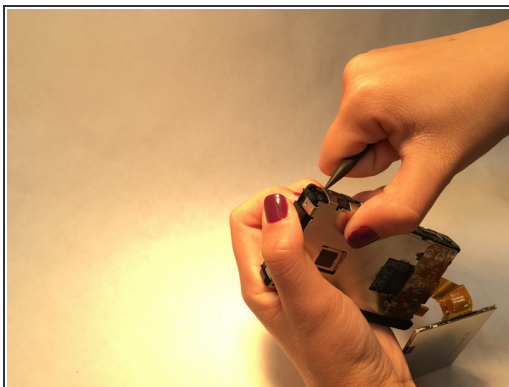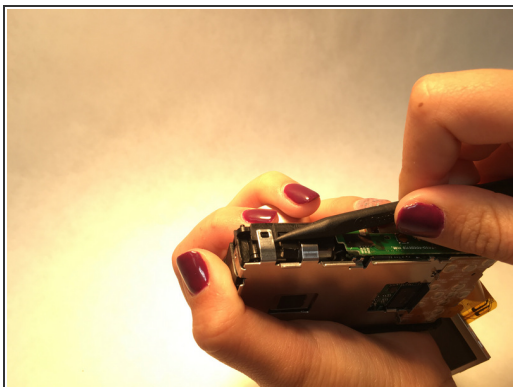

- Pry off the clip on the top corner.

 Be sure to wear safety glasses

Step 10

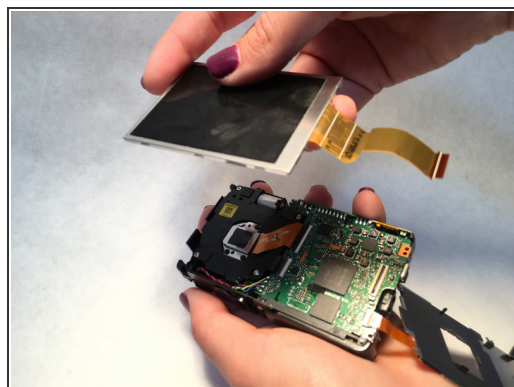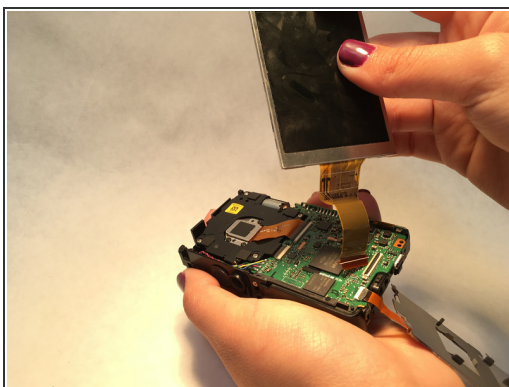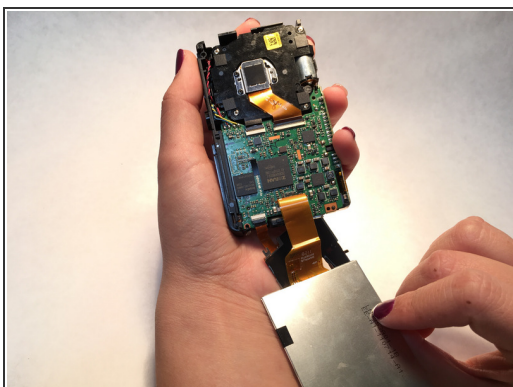

- Unclip the silver clip that is holding the tape
- Lift the silver clip up and the yellow tape will slide out

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-06 03:15:13 AM.